

Micro Server

User Guide

Product Name: Micro Server

Product Model: SE5 16-EA4-11

File Version: V1.0

Release Date 2023-3-7

Preface

Summary

This file is about the product features, specifications, system architecture, application scenarios, installation configuration, etc. of the Micro Server.





Target Readers

This document is mainly targeted to the following personnel:

- Enterprise administrators and users;
- Enterprise developers and pre-sales personnel.

Signs

The meanings of these signs are as follows:

Sign	Name	Description
	Danger	Indicates a highly dangerous situation that, if not avoided, may result in death or serious injury.
	Warning	Indicates a potentially dangerous situation that, if not avoided, may result in death or serious injury.
	Precaution	Indicates a potentially hazardous situation that, if not avoided, may lead to equipment damage, data loss, performance degradation or unpredictable results.
	Description	For important or key information. Not safety warnings.

Revisions

File Version	Release Date	Description
V1.0	2023-3-6	First official release.

Table of Contents

Part 1	
1 Safety	4
1.1 General Safety	4
1.2 Electrical Safety	5
1.3 Equipment Sign	6
Part 2	
1. Introduction	6
2. SDK Development Guide	7
3. Interface Introduction	7
4. Login	8
4.1 RS232	8
4.1.1 Serial Port Parameter Configuration	8
4.1.2 Using Serial Port Debugging on Windows	8
4.1.3 Serial Port Debugging on Linux	9
4.2 Ethernet SSH	10
5 Remote Desktop X11VNC	11
6 Device ID	13
6.1 Check device ID	13
7 Fan Operation	13
8 HDMI Display Test	14
9 Network IP Configuration	14
10 WIFI	15
10.1 WIFI Cconnection	15
10.2 WIFI Hotspot	16
11 Bluetooth	16
11.1 Bluetooth Audio	19
11.2 File Transfer	20
12 USB Flash Drive and TF Card Mounting	22
12.1 USB Flash Drive Mounting	22
12.2 TF card Mounting	23
13 Use RS485/RS232	23
13.1 RS485	23
13.2 RS232	24
14 Firmware Upgrade	24
14.1 Preparation	24
14.2 Upgrade Steps	25
Part 3	
1 Operation and Installation	26
1.1 Panel Description	26
1.1.1 Mainframe Front Panel	26
1.2 Equipment Operation	26
1.2.1 Power Off	26
1.3 Equipment Installation	27
1.3.1 Desk Installation	27
1.3.2 Wall Installation	27
FCC Regulatory Compliance	29

Part 1

1 Safety

1.1 General Safety

Instruction

When operating and installing the equipment, please pay attention to the equipment identifications and safety precautions described in the manual.

The “Danger”, “Warning” and “Precautions” mentioned in the manual are only supplements to safety matters and do not represent all possible situations.

Installation requirements

The personnel who operate, install and maintain the equipment must understand all safety precautions and master correct operations. The installation requirements are as follows:

- Equipment operation, installation and maintenance must be done by trained personnel.
- Equipment maintenance must be done by authorized personnel of our company.
- Equipment components replacement must be done by authorized personnel of our company.
- The operator shall contact our company in time in case of equipment failure and abnormality when installing.

Grounding Requirements

- The grounding operation shall be completed before equipment installation. The ground wire shall be removed after the removal of the equipment.
- It is forbidden to carry out any operation on the equipment when it is not grounded or poorly grounded.
- Please check the grounding before operating the equipment to ensure it is well grounded.

Personal Safety

- Please wear anti-static clothes, gloves and wristbands for equipment installation and operation. Please remove conductive ornaments to avoid short circuit and electric shock damage.
- It is strictly prohibited to operate and install equipment in dangerous environment, such as thunderstorm weather, flammable environment, etc.

Equipment Safety

- Ensure that the equipment is firm and reliable under any installation mode, such as installation on table, wall or bracket.
- Ensure that the equipment is well grounded before startup. Remove the ground wire after shutdown of Micro server.
- Anti-static gloves are required for maintenance window operation. Please use a screwdriver to remove or install the maintenance window cover.
- It is strictly prohibited to cover or block the ventilation panel of the equipment.
- It is strictly prohibited to remove the sealant plug, such as the antenna rubber plug.
- The equipment needs to be grounded with a three-core power cord.

1.2 Electrical Safety

Harsh Environment

- It is strictly prohibited to operate the equipment with AC in thunderstorm weather for fear of fatal danger.
- It is strictly prohibited to carry out outdoor equipment operations in thunderstorm weather for fear of fatal danger.
- It is strictly prohibited to operate nonstandard under high-voltage power supply for fear of fatal danger.

Equipment Power Supply




- It is strictly prohibited to remove the power cord when the equipment is powered on for fear of physical injury caused by electric sparks.
- Turn off the power switch before removing the power cord.
- Before connecting the power cord to the equipment, make sure the positive and negative electrodes are placed correctly.
- Ensure that the connection is firm after the equipment power cord is connected to the equipment.

Static Electricity

- Electrostatic discharge shall be carried out before equipment operation so as to prevent static electricity generated by human friction and movement.
- Wear an anti-static wristband and ground its terminal before touching and holding the device.

1.3 Equipment Sign

Equipment safety signs are as follows:

Sign	Name	Description
	High Temperature	This sign indicates that the surface temperature is high. Do not directly touch the equipment shell without wearing protecting gloves.
	Static Electricity	This sign indicates that this area is an electrostatic sensitive area. Do not touch the equipment directly. Please wear anti-static gloves or wristbands when operating in this area.
	Grounding	This sign indicates that the equipment needs external grounding. Connect the equipment with the grounding point of the cabinet or workbench through the protective ground wire to ensure its normal operation.

Part 2

1. Introduction

Powered by SOPHON AI processor BM1684, SE5 16-EA4-11 can be configured with 16GB RAM. With up to 17.6TOPS of INT8 computing power, it provides mainstream programming frameworks, and a complete, easy-to-use tool chain, featuring low cost of algorithm migration. SE5 16-EA4-11 can be applied to visual computing, edge computing, general computing services, smart transportation, unmanned supermarkets, drones and other AI computing scenarios.



2. SDK Development Guide


SE5 16-EA4-11 supports the deep learning framework developed by SOPHON's AI chip. For this development, Sophon SDK is required, which covers model optimization and efficient runtime support capabilities required for the neural network inference stage, providing an easy-to-use and efficient full-stack solution for deep learning application development and deployment.

For the SDK development guide, users can refer to SOPHON 《SophonSDK3 development guide》。

3. Interface Introduction

SE5 16-EA4-11 provides abundant interfaces, including:

- DC-12V
- POWER button
- RS232
- RS485
- Gigabit Ethernet x 2
- USB 3.0 x 2
- USB 2.0 x 2
- HDMI
- TF card slot
- SIM card
- BT antenna
- WIFI antenna x 2
- 4G antenna

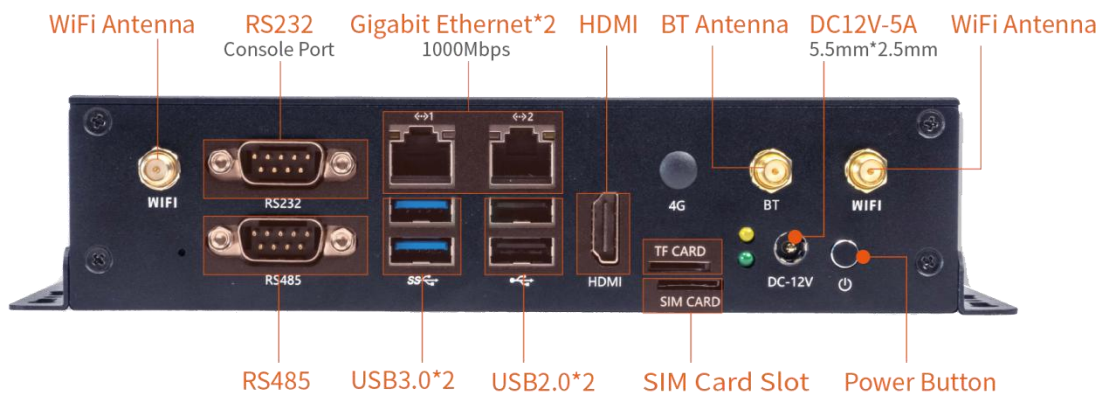

4.Login

There are two login methods for SE5 16-EA4-11: RS232 and network SSH.

The username and password are both linaro

4.1 RS232



4.1.1 Serial Port Parameter Configuration

SE5 16-EA4-11 uses the following serial port parameters:



- Baud rate: 115200
- Data bit: 8
- Stop bit: 1
- Parity bit: No
- Flow control: No

4.1.2 Using Serial Port Debugging on Windows

Putty or SecureCRT software is usually used on Windows. We recommend the free version of MobaXterm. This is a powerful terminal software. We will introduce how to use this software and the way you use it is also available for other software.

Download [MobaXterm](#):

1. Select session as Serial.
2. Change Serial port to the COM port found in Device Manager.
3. Set Speed (bps) to 115200.
4. Click OK

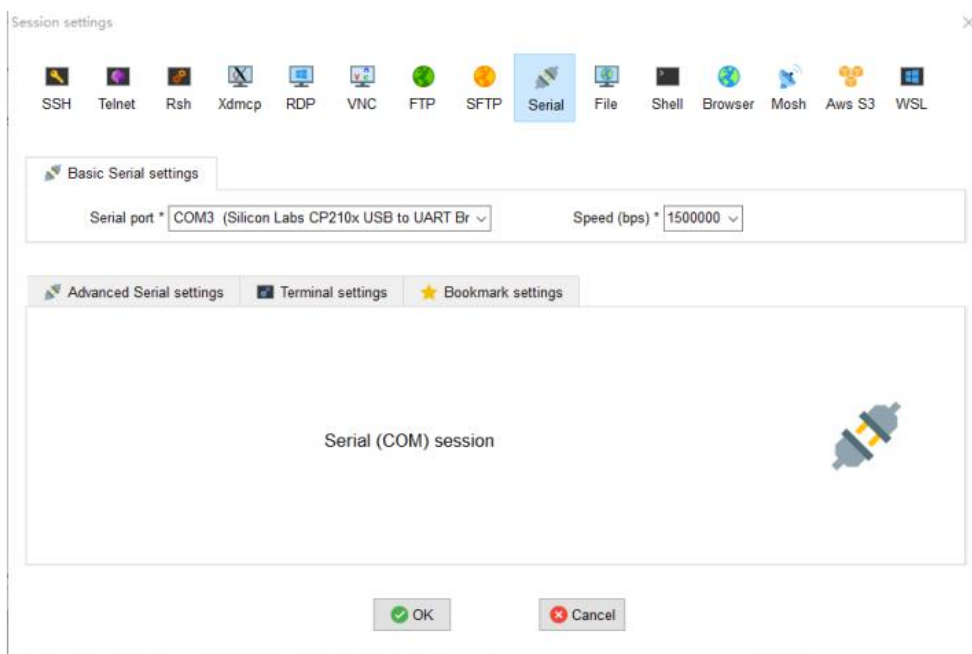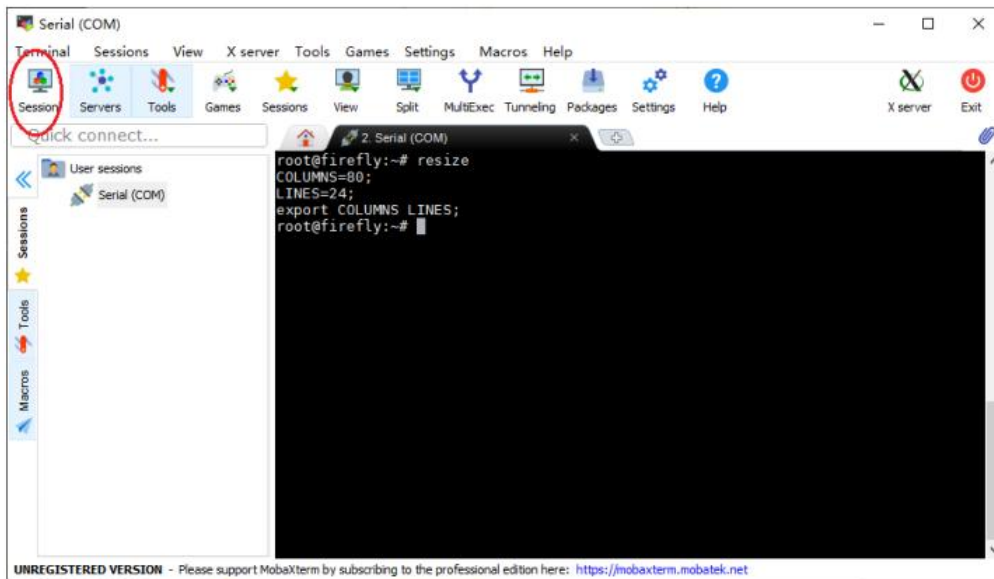

4.1.3 Serial Port Debugging on Linux

There are several options on Linux

- minicom
- picocom
- kermit

Take minicom for example:

- Install minicom

```
sudo apt-get install minicom
```

- See what the serial device file is after connecting the serial cable. The following example is /dev/ttyUSB0:

```
$ ls /dev/ttyUSB*  
/dev/ttyUSB0
```

- Run:

```
$ sudo minicom -b 115200 -D /dev/ttyUSB0  
Welcome to minicom 2.7  
OPTIONS: I18n  
Compiled on Jan 1 2014, 17:13:19.  
Port /dev/ttyUSB0, 15:57:00
```

4.2 Ethernet SSH

SE5 16-EA4-11 has two Ethernet ports. By default, Ethernet port 0 (near the serial port) is configured with dynamic IP, while Ethernet port 1 (near the HDMI port) is configured with static IP 192.168.150.1, subnet mask 255.255.255.0, you can set the PC to 192.168.150.2/24 for initial login.

Ethernet port 0 is typically assigned an IP address by the router, and the IP address information may not be known in advance. Therefore, it is recommended for users to use Ethernet port 1 for the initial login.

After the Ethernet port LED blinks normally, open a terminal and use ssh to log in. The port number is 22, and the username and password are both linaro :

```
ssh linaro@192.168.150.1
```

If the login fails, you can try whether ping the IP address of SE5 16-EA4-11's Ethernet port 1 by using PC.

*Note: the PC needs to add the same network segment IP, because the IP address of the PC may not be in the same one.

The following is how to add the same network segment IP on PC (using administrator mode):

- windows 10

```
netsh int ipv4 add address "Ethernet" 192.168.150.101 255.255.255.0
```

"Ethernet" refers to the network port, 192.168.150.101 is the IP address, and 255.255.255.0 is the subnet mask.

- linux

```
ifconfig enp4s0:1 192.168.100.89
```

enp4s0 is the name of the network card driver of the PC, and you need to use ifconfig command to check the detail.

5 Remote Desktop X11VNC

x11vnc is a tool that allows administrators to directly connect to the server's real X desktop via the VNC Viewer.

First, it is necessary to install the X desktop environment on SE5 16-EA4-11, During installation, select Display Manager to lightdm:

```
sudo apt update
sudo apt install -y xserver-xorg-video-dummy x11vnc xfce4
sudo vim /etc/X11/xorg.conf
sudo reboot
```

Content in /etc/X11/xorg.conf as:

```
Section "Device"
    Identifier "Configured Video Device"
    Driver     "dummy"
    VideoRam 256000
EndSection

Section "Monitor"
    Identifier "Configured Monitor"
    HorizSync 5.0 - 1000.0
    VertRefresh 5.0 - 200.0
    ModeLine "1920x1080" 148.50 1920 2448 2492 2640 1080 1084 1089 1125
+Hsync +Vsync
# Modeline "1280x800" 24.15 1280 1312 1400 1432 800 819 822 841
EndSection


Section "Screen"
    Identifier "Default Screen"
    Monitor    "Configured Monitor"
    Device     "Configured Video Device"
    DefaultDepth 24
    SubSection "Display"
        Depth 24
        Modes "1920x1080"
# Modes "1280x800"
    EndSubSection
EndSection
```

After the installation, start the x11vnc service.


```
sudo x11vnc -display :0 -auth /var/lib/lightdm/.Xauthority &
```

After that, users can use \$bm1684_ip:0 address on the PC to remotely connect via VNC. Here are the specific steps to use VNC Viewer:


- (1) First, download [VNC Viewer](#) from the official website and select an appropriate one based on your PC system.
- (2) After installation, open VNC Viewer and skip the login:
- (3) Enter SE5 16-EA4-11: \$bm1684_ip:0 address:

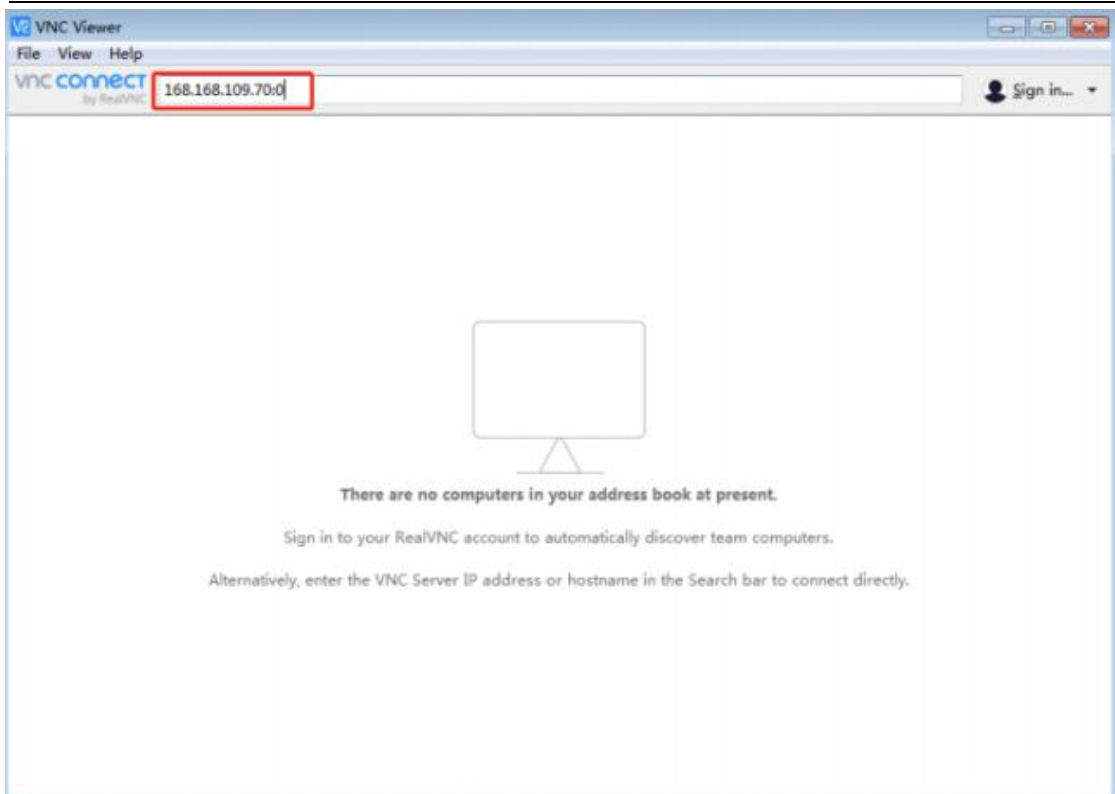

(4) Enter the user and password linaro

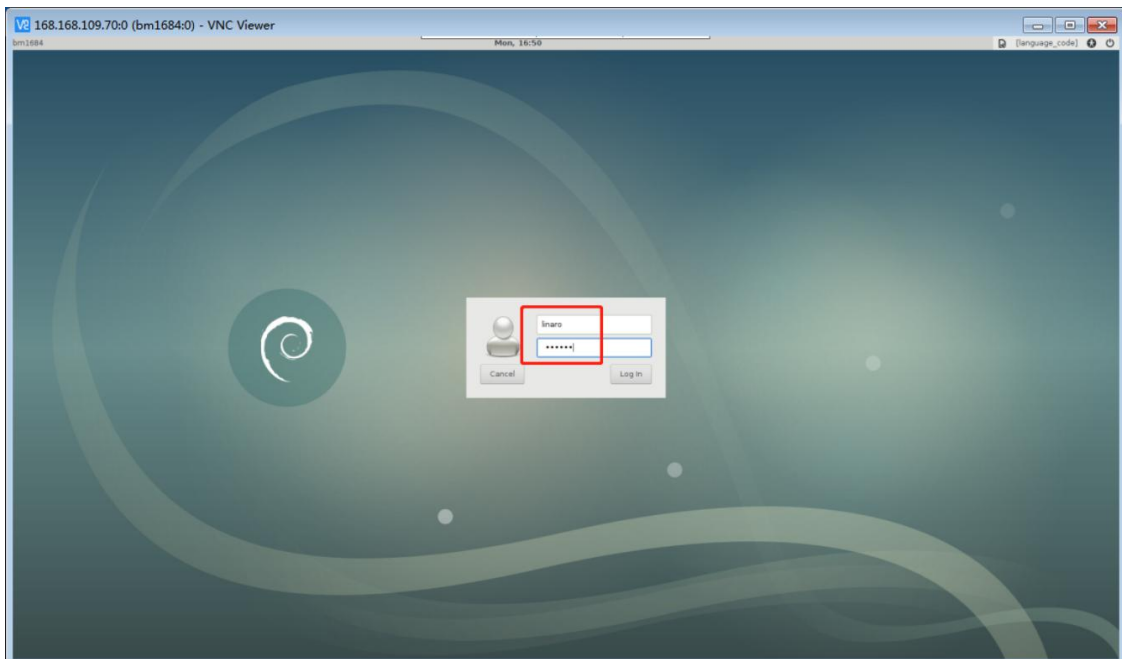

(5) Enter the xfce4 desktop successfully:

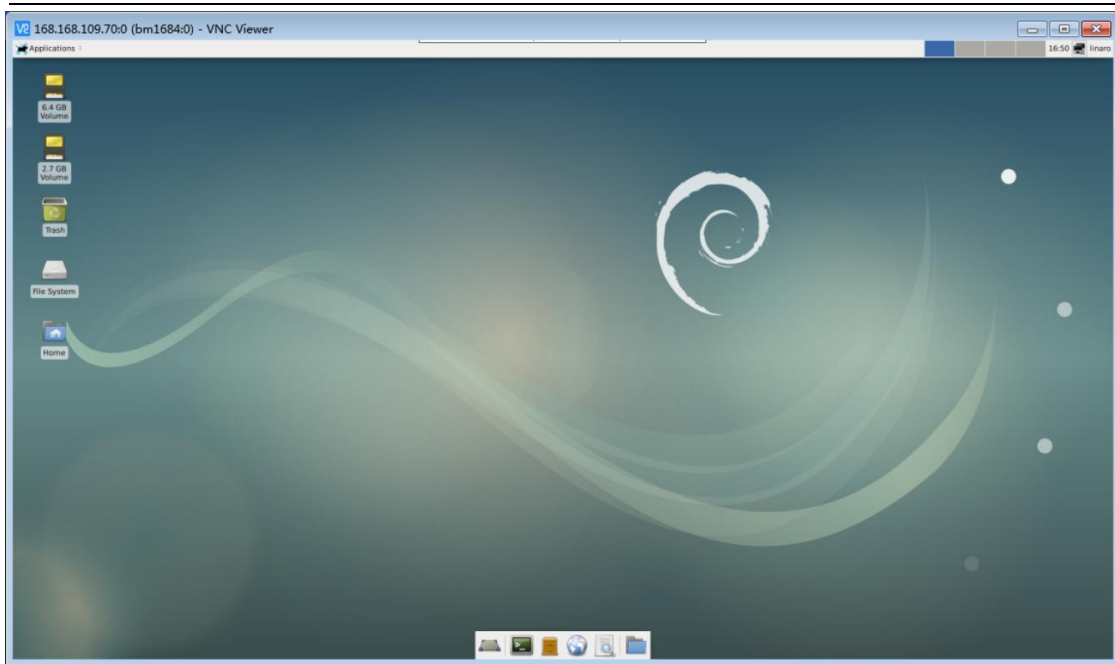

6 Device ID

6.1 Check device ID

To check the device ID, you can read the serial number of the core board. After reading successfully, a string in json format will be returned:

```
linaro@linaro:~$ cat /sys/bus/i2c/devices/1-0017/information
{
  "model": "SA5",
  "chip": "BM1684",
  "mcu": "STM32",
  "product sn": "HQDZKETBWY2100012",
  "board type": "0x01",
  "mcu version": "0x38",
  "pcb version": "0x12",
  "reset count": 0
}
```

7 Fan Operation

SE5 16-EA4-11 fan operates at 4 different levels

Processor current temperature	Fan operating level
$\geq 53^{\circ}\text{C}$	1
$\geq 65^{\circ}\text{C}$	2
$\geq 75^{\circ}\text{C}$	3
$\geq 80^{\circ}\text{C}$	4

The higher the fan operating level, the faster the speed. If the current temperature of the processor is below 53°C, the fan is turned off by default.

Users can check the current operating temperature of the processor by executing the following command:

```
cat /sys/class/thermal/thermal_zone1/temp
```

Additionally, users can manually turn on the fan (write 0-4. 0 is off and 4 is the maximum level.)

```
sudo -i  
echo 4 > /sys/class/thermal/cooling_device0/cur_state
```

8 HDMI Display Test

SE5 16-EA4-11 does not come with a Graphics card chip and the processor HDMI output does not use a standard framebuffer driver. As a result, there is no display when the HDMI is connected by default.

If you want to test the HDMI display, you can connect it to the HDMI port and then execute the test-hdmi script.

```
linaro@linaro:~$ sudo -i  
  
root@bm1684:~# test-hdmi  
found (1024, 768) @ 60 fps  
entry [0] = (1024, 768) added  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1024, 768) @ 60 fps  
found (1920, 1080) detailed timing desc  
entry [1] = (1920, 1080) added  
found (1920, 1080) detailed timing desc  
found (1920, 1080) detailed timing desc  
found (1920, 1080) detailed timing desc
```

9 Network IP Configuration

The SE5 16-EA4-11 comes with Debian 9 as the default operating system. By default, eth0 in the dual Ethernet port configuration obtains IP dynamically (that is, DHCP). eth1 is 192.168.150.1

Configure eth1 via /etc/network/interfaces.d/eth1 file. This file serves as the only modification to Debian's original network configuration.

```
linaro@linaro:~$ cat /etc/network/interfaces.d/eth1

auto eth1
iface eth1 inet static
address 192.168.150.1
netmask 255.255.255.0
dns-nameservers 192.168.150.1
```

If users delete this file, eth1 will obtain IP dynamically (DHCP), like eth0 . If you wants to set a static IP address for eth0 as well, you can create an eth0 file under the /etc/network/interafces.d folder, which will take effect after restarting.

It is important to note that it is advisable to avoid configuring both network interface cards as the same network segment. Otherwise this could cause issues.

10 WIFI

SE5 16-EA4-11 supports WIFI, and the network card name in the system is wlan0 by default:

```
root@linaro:~# ifconfig wlan0
wlan0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
ether 20:57:9e:ba:02:fc txqueuelen 1000 (Ethernet)
RX packets 0 bytes 0 (0.0 B)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 0 bytes 0 (0.0 B)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

10.1 WIFI Cconnection

(1) Enable WIFI:

```
nmcli radio wifi on
```

(2) Check if WIFI is enabled successfully:

```
# Print enabled to indicate success
nmcli radio wifi
```

(3) Check WIFI access points:

```
nmcli dev wifi list
```

(4) Connect to a WIFI access point:

```
sudo nmcli device wifi connect zouxfest1 password 12345678 name test
```

zouxftest1 is the name of the WIFI access point and 12345678 is the password.

The connection log is as follows:

```
Device 'wlan0' successfully activated with 'fd6c634b-f517-4ae9-a8e9-292a9c19d25c'.
```

Please note that if you want to disable WIFI connection.

```
nmcli radio wifi off
```

10.2 WIFI Hotspot

You can create a wireless AP hotspot by using the nmcli command:

```
sudo nmcli device wifi hotspot ifname wlan0 con-name my-hostapt ssid  
zouxftest7  
band bg password 12345678 channel 5
```

Instructions are as follow:

- con-name : the connection name, my-hostapt
- ssid : the AP hotspot name, zouxftest7
- band : WIFI protocol standard, bg
- password : AP hotspot's password, 12345678
- channel : AP hotspot's channel , 5

After the wireless AP hotspot is created, you can turn on/off the WIFI hotspot by using the following command:

```
sudo nmcli connection up[down] my-hostapt
```

11 Bluetooth

SE5 16-EA4-11 supports wireless Bluetooth and its Bluetooth device information can be displayed by using hciconfig -a command.


```
linaro@linaro:~$ hciconfig -a

hci0: Type: Primary Bus: USB
      BD Address: 20:57:9E:BA:7C:EC ACL MTU: 1021:8 SCO MTU:
255:16
      UP RUNNING
      RX bytes:650 acl:0 sco:0 events:41 errors:0
      TX bytes:2170 acl:0 sco:0 commands:41 errors:0
      Features: 0xff 0xff 0xff 0xfa 0xdb 0xbd 0x7b 0x87
      Packet type: DM1 DM3 DM5 DH1 DH3 DH5 HV1 HV2 HV3
      Link policy: RSWITCH HOLD SNIFF PARK
      Link mode: SLAVE ACCEPT
      Name: 'bm1684'
      Class: 0x000000
      Service Classes: Unspecified
      Device Class: Miscellaneous,
      HCI Version: 4.2 (0x8) Revision: 0xaba8
      LMP Version: 4.2 (0x8) Subversion: 0xa0cd
      Manufacturer: Realtek Semiconductor Corporation (93)
```

If you encounter the following error message:

```
Can't open HCI socket.: Address family not supported by protocol
```

It may indicate an issue with the dependencies of the load module. In such cases, reloading the dependencies and performing a soft reboot will resolve the issue.

```
sudo -i
depmod -a
reboot
```

To check whether the current device is the master or slave device:

```
linaro@linaro:~$ hciconfig hci0 lm
hci0: Type: Primary Bus: USB
      BD Address: 20:57:9E:BA:7C:EC ACL MTU: 1021:8 SCO MTU: 255:16
      Link mode: SLAVE ACCEPT # slave devices
```

To start the PulseAudio service for the media device:

```
linaro@linaro:~$ pulseaudio --start --log-target=syslog
```

The steps to connect a Bluetooth device are as follows:

(1) Start the Bluetooth management tool:

```
linaro@linaro:~$ bluetoothctl
[NEW] Controller 20:57:9E:BA:7C:EC bm1684 [default]
```

(2) Power on the Bluetooth controller:

```
[bluetooth]# power on
Changing power on succeeded
```

(3) Set the Bluetooth agent as default value:

```
[bluetooth]# agent on
Agent registered
[bluetooth]# default-agent
Default agent request successful
```

(4) Make the device discoverable by other Bluetooth devices:

```
[bluetooth]# discoverable on
Changing discoverable on succeeded
[CHG] Controller 20:57:9E:BA:7C:EC Discoverable: yes
```

(5) At this time, the SE5 16-EA4-11 Bluetooth device can be found on the smartphone. Click on the smartphone and pair:

```
[NEW] Device A4:90:CE:DF:64:4F iQOO Neo6 SE
[CHG] Device A4:90:CE:DF:64:4F Modalias:
bluetooth:v001Dp1200d1436
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 00001105-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000110a-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000110c-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000110e-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 00001112-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 00001115-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 00001116-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000111f-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000112d-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 0000112f-0000-1000-8000-
00805f9b34fb
[CHG] Device A4:90:CE:DF:64:4F UUIDs: 00001132-0000-1000-8000-
00805f9b34fb
```

(6) Connect the mobile phone:

```
[bluetooth]# connect A4:90:CE:DF:64:4F
Attempting to connect to A4:90:CE:DF:64:4F
[CHG] Device A4:90:CE:DF:64:4F Connected: yes
Connection successful
[CHG] Device A4:90:CE:DF:64:4F ServicesResolved: yes
[iQOO Neo6 SE]#
```

(7) Setting up the mobile phone as a trusted device:

```
[iQOO Neo6 SE]# trust A4:90:CE:DF:64:4F
[CHG] Device A4:90:CE:DF:64:4F Trusted: yes
Changing A4:90:CE:DF:64:4F trust succeeded
```

11.1 Bluetooth Audio

bluez-alsa is available, a Bluetooth audio ALSA backend application.

Install bluez-alsa

SE5 16-EA4-11 does not come with the bluez-alsa tool pre-installed. Users need to compile and install it . Here are the steps for version 1.3.0:

- (1) Download: <https://github.com/Arkq/bluez-alsa/releases/tag/v1.3.0>
- (2) Install dependencies

```
sudo apt install -y libasound2-dev libbluetooth-dev libglib2.0-dev libsbc-
dev
libfdk-aac-dev pkgconf
```

(3) Unzip:

```
tar xzvf bluez-alsa-1.3.0.tar.gz
cd bluez-alsa-1.3.0
```

(4) Compile and install:

```
autoreconf --install
mkdir build && cd build
../configure --enable-aac --enable-debug
make &&
make install
```

Audio Test

After installation, you can connect Bluetooth headphones or speakers for music playback. First, configure Bluetooth as the master device mode.

```
sudo hciconfig hci0 lm master
```

Start the bluez-alsa service. Note that the PulseAudio service and bluez-alsa are mutually exclusive.

```
# Remove PulseAudio process
killall pulseaudio

# Start the bluez-alsa service for connecting to bluetooth headphones or
speakers
bluealsa -p a2dp-source -p hsp-ag &
```

Connect Bluetooth headphone:

```
[bluetooth]# connect 0C:AE:BD:9B:BB:5C
Attempting to connect to 0C:AE:BD:9B:BB:5C
[CHG] Device 0C:AE:BD:9B:BB:5C Connected: yes
Connection successful
[CHG] Device 0C:AE:BD:9B:BB:5C ServicesResolved: yes
[EDIFIER LolliPods 2022 version]#
```

Open another login and execute the following command to play audio:

```
aplay -D bluealsa:HCI=hci0,DEV=0C:AE:BD:9B:BB:5C,PROFILE=a2dp
example.wav
```

For more information, please visit source code repository:
<https://github.com/Arkq/bluez-alsa/tree/v1.3.0>

11.2 File Transfer

Bluetooth file transfer can be done by using the OBEX protocol, which encapsulates information data with an object model and transmits application with a communication protocol.

On Linux, the Obex service is needed.

First, SE5 16-EA4-11 connect the Bluetooth device according to the previous steps on; start the Obex daemon, and the receiving directory is set as /home/linaro/:

```
/usr/lib/bluetooth/obexd -r /home/linaro -a -d &
```

Use obex push

First, configure the Bluetooth as the master device mode.

```
sudo hciconfig hci0 lm master
```

Search for Phone Obex Push service channel:

```
linaro@bml684:~$ sdptool search --bdaddr A4:90:CE:DF:64:4F OPUSH
Searching for OPUSH on A4:90:CE:DF:64:4F ...
Service Name: OBEX Object Push
Service RecHandle: 0x1000d
Service Class ID List:
  "OBEX Object Push" (0x1105)
Protocol Descriptor List:
  "L2CAP" (0x0100)
  "RFCOMM" (0x0003)
Channel: 12
  "OBEX" (0x0008)
Profile Descriptor List:
  "OBEX Object Push" (0x1105)
    Version: 0x0102

Searching for OPUSH on A4:90:CE:DF:64:4F ...
Service Search failed: Invalid argument
```

You can see the channel is 12, and you can then push the file to the phone.

```
linaro@linaro:~$ obexftp --nopath --noconn --uuid none --bluetooth
A4:90:CE:DF:64:4F --channel 12 --put sn.txt
Suppressing FBS.
Connecting..\done
Sending "sn.txt"../done
Disconnecting..-done
```

On the phone, a pop-up window showing whether to receive the file or not will appear.

Received successfully:

Use obexctl interactive command line

The following demonstrates the steps for SE5 16-EA4-11 to receive files:

(1) Enable obex service on the device (the slave device):

```
root@linaro:~# systemctl --user start obex
```

(2) Enter the interactive command line:

```
root@linaro:~# obexctl
[NEW] Client /org/bluez/obex
```

(3) Connect SE5 16-EA4-11 (the master device):

```
[obex]# connect 20:57:9E:BA:7C:EC
Attempting to connect to 20:57:9E:BA:7C:EC
...
[NEW] Session /org/bluez/obex/client/session2 [default]
[NEW] ObjectPush /org/bluez/obex/client/session2
```

(4) Send the file:

```
[20:57:9E:BA:7C:EC]# send /root/test.txt
Attempting to send /root/test.txt to /org/bluez/obex/client/session1
[NEW] Transfer /org/bluez/obex/client/session1/transfer1
Transfer /org/bluez/obex/client/session1/transfer1
      Status: queued
      Name: test.txt
      Size: 0
      Filename: /root/test.txt
      Session: /org/bluez/obex/client/session1
[CHG] Transfer /org/bluez/obex/client/session1/transfer1 Status: complete
```

(5) Check the `/home/linaro/` directory for the `test.txt` file on SE5 16-EA4-11:

```
linaro@linaro:~$ ls -l test.txt
-rw----- 1 linaro linaro 0 Nov 25 15:49 test.txt
```

12 USB Flash Drive and TF Card Mounting

When a U flash drive or TF card is inserted, the storage device will be recognized as `/dev/sdb1` or `/dev/mmcblkp1`, like desktop PC Linux environment.

The file system supports FAT, FAT32, EXT2/3/4, NTFS. SE5 16-EA4-11 does not support automatic mounting, so you need to mount by yourself. After completing data writing, please use `sync` or `umount` operation in time. When shutting down, please use the `sudo poweroff` command to avoid data loss .

12.1 USB Flash Drive Mounting

Insert the USB flash drive and use `dmesg` to find out the corresponding `sd` device:

```
[15460.953423] [5] sdb: sdb1
```

Mount USB Flash Drive:

```
# create mounting directory
mkdir disk
# mount
sudo mount /dev/sdb1 disk
# Check the files in the U disk
```

12.2 TF card Mounting

TF card mounting is similar to USB flash drive. Use `dmesg` to find out the corresponding `mmcblk` device:

```
[16220.776440] [4] mmcblk1: p1
```

Mount the TF disk:

```
# create mounting directory
mkdir media
# mount
sudo mount /dev/mmcblk1p1 media
# Check the files in the TF Card
ls media
```

13 Use RS485/RS232

13.1 RS485

SE5 16-EA4-11 has an RS485 interface, with device name `/dev/ttyS2`, supporting full-duplex communication with a default baud rate of 9600.

The testing steps are as follows:

(1) Connect the hardware

Connect the RS485's A, B, and GND pins to PC serial adapter (USB to 485 serial port module) respectively.

(2) Open the PC serial terminal

Open Kermit on the terminal and set the baud rate:

```
$ sudo kermit
C-Kermit> set line /dev/ttyUSB0
C-Kermit> set speed 9600
C-Kermit> set flow-control none
C-Kermit> connect
```

`/dev/ttyUSB0` is the device file of the USB-to-serial adapter, which may vary depending on the actual recognition of the PC.

(3) Send data

The device file for RS232 is `/dev/ttyS1`. Run the following command on the device:

```
sudo -s
stty -F /dev/ttyS2 9600 -echo
echo linaroRS485 test... > /dev/ttyS2
```

The PC's serial terminal will then receive the string "linaro RS485 test...".

(4) Receive data

First, run the following command on the device:

```
sudo -s
cat /dev/ttyS2
```

Then, enter the string "linaro RS485 test..." in the PC's serial terminal, and the device will receive the same string.

13.2 RS232

In addition to RS485, SE5 16-EA4-11 also has an RS232 interface with device name `/dev/ttyS1`, supporting full-duplex communication with a default baud rate of 115200.

Note that RS232 is used for login by default, so users should enter the following command to restore it to normal communication serial port functionality:

```
sudo systemctl disable --now serial-getty@ttyS1.service
```

The testing steps are similar to RS485. You just need to pay attention to the device name and baud rate.

14 Firmware Upgrade

SE5 16-EA4-11 uses a TF card to upgrade firmware. Users must strictly follow the following steps.

14.1 Preparation

- SE5 16-EA4-11
- PC
- USB card reader
- TF card (Class10 or higher is recommended, and choose an 8/16/32 GB capacity according to the firmware)
- Firmware to be upgraded

14.2 Upgrade Steps

- (1) The TF card needs to use MBR partition and to be formatted in FAT32 format;
- (2) Unzip all files from the firmware (in zip compressed format) onto the TF card;
- (3) Insert the TF card into the TF card slot of SE5 16-EA4-11 and power on;
- (4) During the upgrade process, the LED light will flash briefly, indicating that the upgrade is in progress;
- (5) If the upgrade is successful, the green LED light will flash continuously;
- (6) If the upgrade fails, all LED lights will turn off.

Note:

- If the TF card exceeds 32GB, it may be unable to format it in FAT32 due to limitations of the Windows system, so it would be better to choose a TF card with a size of 32GB or less.

- The upgrade process may take about six minutes. Please be patient.


Part 3

1 Operation and Installation

1.1 Panel Description

1.1.1 Mainframe Front Panel

Micro server Mainframe front panel is described as follow:

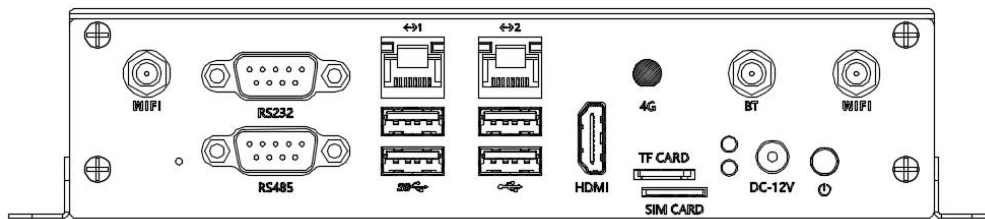

1.2 Equipment Operation

1.2.1 Power Off

Micro server supports the following two ways of powering off.

1. Press the power switch button

- **Step 1** Press the power switch on the front panel for 3 seconds.
- **Step 2** Observe the power indicator (green). If it is off, Micro server is powered off successfully.
- **The End**

2. Cut the power cable

- **Step 1** Unplug the power cable to power off Micro server.
- **Step 2** Observe the power indicator (green). If it is off, Micro server is powered off successfully.
- **The End**

1.2.2 Power On

Micro server supports the following two ways of powering on.

1. Press the power switch button

- **Step 1** Press the power switch on the front panel for 2 seconds to power on.

- **Step 2** Observe the power indicator. If it turns green, Micro server is powered on successfully.
 - **The End**
2. Connect the power cable
- **Step 1** Connect the power cable to power on Micro server.
 - **Step 2** Observe the power indicator. If it turns green, Micro server is powered on successfully.
 - **The End**

1.3 Equipment Installation

1.3.1 Desk Installation



Precaution

- Ensure that the equipment is well grounded.
- Ensure that the desk is stable and the ventilation and heat dissipation environment is good.
- It is forbidden to cover the air outlet or shell surface of Micro server panel.

Steps

- **Step 1** Place Micro server on the desk.
- **Step 2** Connect external cables,
- **Step 3** Power on Micro server, see in 4.2.2 Power On
- **The End**

1.3.2 Wall Installation





Description


- Ensure that the selected perforated wall has a thickness of more than 50cm and a bearing capacity of more than 10kg.
- Ensure that the installed bracket is parallel to the ground without skewing.

Steps

- **Step 1** Prepare an electric drill, and drill holes in the wall according to the distance shown in the figure.

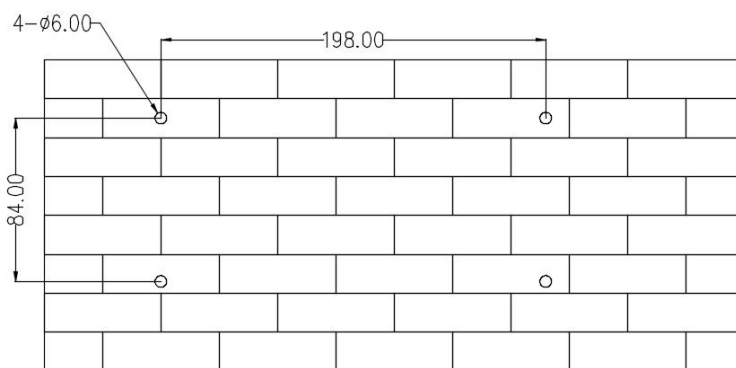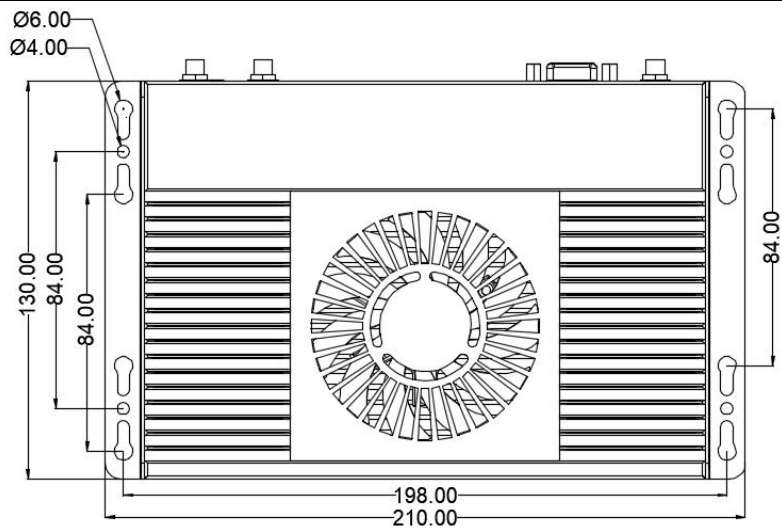

- **Step 2** Prepare a hammer and M4*25 self-tapping screws. Hammer 4 plastic expansion anchors into the holes.
- **Step 3** Fix the device to the wall with 4 self-tapping screws.

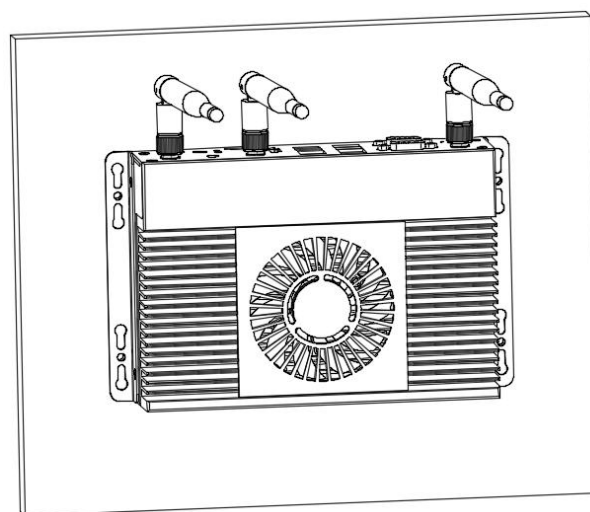

- **Step 5** Connect the external cable.
- **Step 6** Power on Micro server, see in 4.2.2 Power On.
- **The End**

FCC Regulatory Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

4.1 RF Exposure Compliance

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed with at least distance 20 cm between the radiator and your body. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.